

FULTON – JETTA OIL CHANGE and WHEEL ROTATION

Here at home ...

to jack up the car ...

use the floor jack, placing its “head” right next to the lift point (i.e., on the single-lipped point just toward the back of the car from the double-lipped point.

jack it up to height that the heavy-duty (with yellow trim) jackstand fits underneath, at the double-lipped point.

do the same for the other side – THEN CHECK THE FIRST SIDE!!!

to remove the plastic cover, use torx T25 on magnetic screwdriver and T30 on 1/4-inche ratchet

to remove the oil plug, use a 19mm socket

use FIVE quarts of oil -- 5w30 505.01

WHEEL ROTATION

Use two jacks, one side at a time. To start bolts, use an 11/16” socket (like for spark plug) by hand – otherwise alignment has to be perfect (because regular lug wrench is too clumsy).