

updated 5 Aug 2018

Mazda oil change

jack up right front quadrant of the car

plug and filter are above the back trap door. Triangular.

- Open with a) 8mm ratchet on two screws
- b) screwdriver pry down inner piece of round “plug”

plug is removed with 8mm allen wrench.

4 ½ quarts of 0w-20 oil

Mobil1 filter: M-1-108A

Purolator “Boss” filter: PBL14612